



**Pro System II Universal Nylon Brake Hose
for Harley Davidson FLHX Models w/ ABS
Part #R031503**

Please study these instructions carefully before installing your new Brake Hose Kit. If you have any questions, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am - 5:00 pm, Pacific Standard Time, Monday through Friday.


IMPORTANT NOTE: Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

INSTALLATION INSTRUCTIONS

CAUTION: Do not allow the master cylinder to completely drain of brake fluid at any time during this process. Use care when handling brake fluid, as it can quickly damage finished surfaces (paint, plating, etc.).

NOTE: The 20° banjo is used at the ABS Distribution Block and the 35° banjo is used at the master cylinder.

**How To Assemble
Pro System II Fittings:**

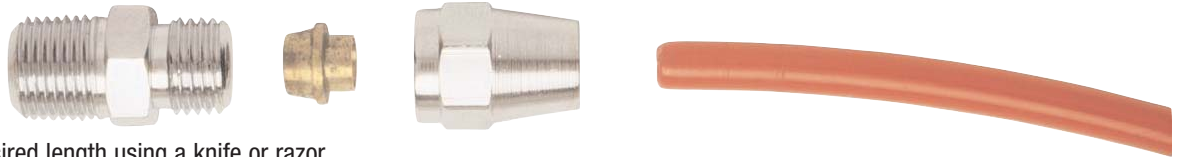

1. Cut colored hose to desired length using a knife or razor.
2. Disassemble the three piece adapter fitting.
3. Slide the tapered end (with the taper first) onto the hose.
4. Slide the brass ferrule onto the hose with the tapered end going towards the end of the hose.
5. Push the hose into the body until it bottoms out, then bring the tapered nut forward and tighten it down.

NOTE: To re-use compression fittings, you will need a 5/16" Replacement Ferrule #R49009.

©2009 Edelbrock Corporation
Rev. 4/09 - AJ/mc

Edelbrock Corporation, 2700 California Street, Torrance, CA 90503
Toll-Free Tech Line: 1-800-416-8628

Part #R031503
Brochure #63-R031503



**Pro System II Universal Nylon Brake Hose
for Harley Davidson FLHX Models w/ ABS
Part #R031503**

Please study these instructions carefully before installing your new Brake Hose Kit. If you have any questions, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am - 5:00 pm, Pacific Standard Time, Monday through Friday.


IMPORTANT NOTE: Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

INSTALLATION INSTRUCTIONS

CAUTION: Do not allow the master cylinder to completely drain of brake fluid at any time during this process. Use care when handling brake fluid, as it can quickly damage finished surfaces (paint, plating, etc.).

NOTE: The 20° banjo is used at the ABS Distribution Block and the 35° banjo is used at the master cylinder.

**How To Assemble
Pro System II Fittings:**

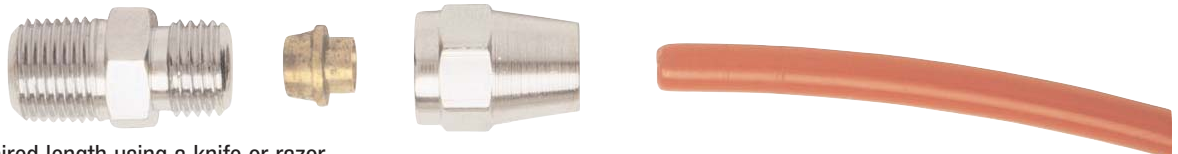

1. Cut colored hose to desired length using a knife or razor.
2. Disassemble the three piece adapter fitting.
3. Slide the tapered end (with the taper first) onto the hose.
4. Slide the brass ferrule onto the hose with the tapered end going towards the end of the hose.
5. Push the hose into the body until it bottoms out, then bring the tapered nut forward and tighten it down.

NOTE: To re-use compression fittings, you will need a 5/16" Replacement Ferrule #R49009.

©2009 Edelbrock Corporation
Rev. 4/09 - AJ/mc

Edelbrock Corporation, 2700 California Street, Torrance, CA 90503
Toll-Free Tech Line: 1-800-416-8628

Part #R031503
Brochure #63-R031503