







Two Line Racer Brake Hose Kit for '09 Yamaha YZF-R1 Part #R09895 INSTALLATION INSTRUCTIONS

Please study these instructions carefully before installing your new Brake Hose Kit. If you have any questions, please call our **Technical Hotline** at: **1-800-416-8628**, 7:00 am - 5:00 pm, Pacific Standard Time, Monday through Friday.

IMPORTANT NOTE: Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

INSTALLATION INSTRUCTIONS

CAUTION: Do not allow the master cylinder to completely drain of brake fluid at any time during this process. Also, use care when handling brake fluid, as it can quickly damage finished surfaces (paint, plating, etc.).

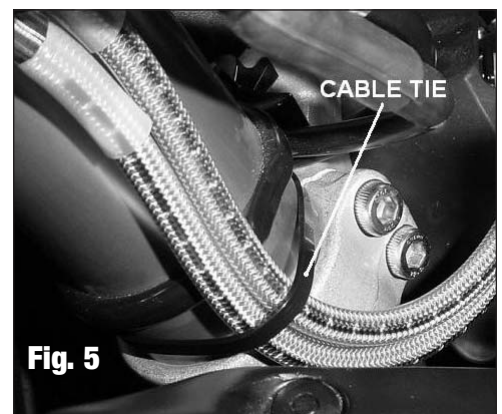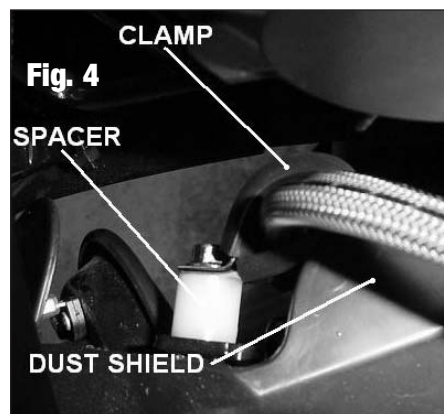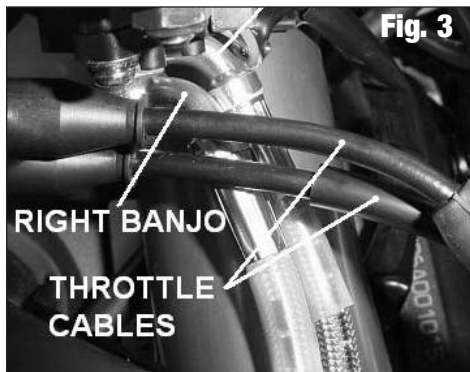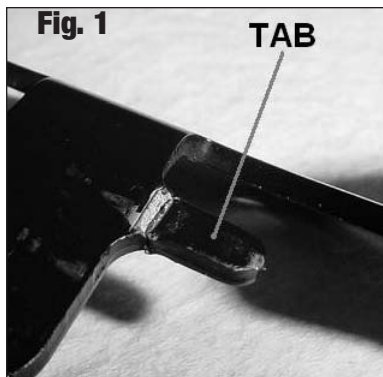

1. Remove factory brake hose assembly and related hardware, noting routing. Plug master cylinder and caliper ports.
2. For easier hose installation, mark master cylinder orientation on handlebar and remove.
3. Unplug horn and remove horn bracket/dust shield assembly from fork tree and then remove horn from bracket.
4. Bend brake hose junction block locating tab on horn bracket flat for hose clearance (See Fig 1).
5. Install straight banjo end of Russell Left/Right side hoses onto calipers (See Fig 2). Locate hose to fork with factory bracket around hose grommet.
6. Install supplied cushion clamp over both hoses so that mounting hole is to left and clamp/hoses are offset to front. Attach hoses to fork tree by inserting factory junction block bolt through cushion clamp and supplied nylon spacer and threading into factory junction block mounting hole. Orient clamp so that hoses clear dust shield and tighten bolt (See Fig. 4, top view).
7. Retain hoses to fork tube with supplied cable tie just above fork tree clamp (**See Fig. 5, top right-side view**). Pull any remaining slack in hoses down through cushion clamp.
8. Check hose clearance throughout entire steering and suspension travel range.
9. Bleed the system and check for leaks while applying pressure.



Edelbrock Corporation, 2700 California Street, Torrance, CA 90503

Toll-Free Tech Line: 1-800-416-8628